


8. Internal timer


This application macro is for applications where the motor is started and stopped with a built-in timer. This macro has also a boost function which operates the motor after a digital input 3 (DI3) has been momentarily activated. An example of timer use is shown below.

For further information see section "*Real-time clock and timer functions*".

When using a direct speed reference in AUTO mode, the speed reference must be connected to analog input 1 (AI1) and the START command is given with digital input 1 (DI1). In HAND/OFF mode, the speed reference and START command are given through the control panel.

If process PI(D) is used, the feedback signal must be connected to analog input 2 (AI2). Setpoint is set from the control panel as default but it also can be changed to analog input 1. Process PI(D) must be commissioned and adjusted with parameters (Group 40) or using the PID control assistant (recommended).

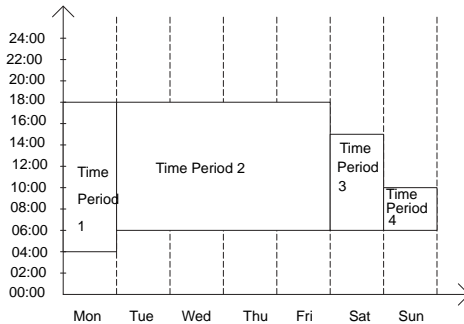

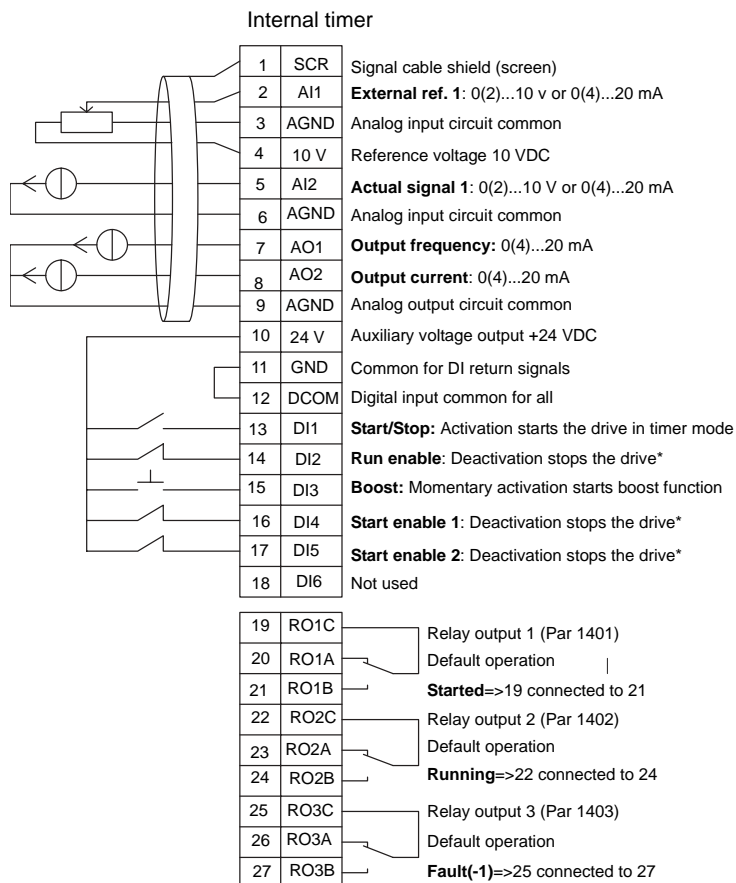

*Disable/enable with parameters 1601,1608 and 1609

Note! Drive starts only if possible protection functions (Run enable or Start enable 1 and 2) are activated from I/O or disabled with parameters.